



Instructions for assembling a 3-stage Multisystem



Fibreglass parts for a 3 stage Multisystem.



Other parts, including Water Management System, filters, Negative Pressure Unit, locker/seat, heaters, mats etc.



Lay out the bases roughly in position and prepare for assembly of the walls.



On each module in turn, slot the wall panels into the channel around the outer edge of the base.....



.....and secure with the over-centre clips provided.



Instructions for assembling a 3-stage Multisystem



Fit the roof panel and again, secure with the over-centre clips.



The locker/seat fits in the 'clean' end.

Later models are provided with a bench seat in each end which locate on aluminium supports mounted on the walls. In this case a smaller locker is provided to fit under the bench in the 'clean' end.



Manoeuvre the modules together.....



.....and secure with the over-centre clips.



Fit screws and wing-nuts around the inner doors to maintain the necessary seal.



Instructions for assembling a 3-stage Multisystem



Fit the shower connection through the hole provided.....



.....and then the shower head itself (bolts and wing-nuts).



Fit the heaters and secure with the bolts and wing nuts provided.




Connect up the Negative Pressure Unit to the 'dirty' end, ensuring a good seal with tape.



Connect up the water inlet and outlet pipes.....



Instructions for assembling a 3-stage Multisystem

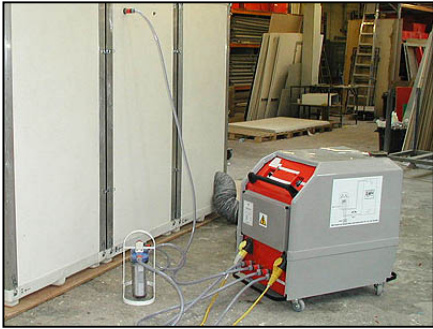

.....to the Water Management System and filters.



Finally, connect up the 110 volt electrics.....



.....and your Multisystem is ready for use.